

Step by step installation instructions for the PWR AI HHT Hand Held Tuner

ATTENTION: We strongly recommend printing these instructions to have them next to you before using the PWR AI HHT Hand Held Tuner

MANDATORY REQUIREMENTS:

1. **Must attach battery charger** to car **BEFORE** moving forward!!!
2. **Must** have strong undisturbed Wi-Fi or 4G/5G signal on your mobile device
3. **Must** disable Apple Car Play or Android Auto (*see instructions below)
4. **Must** turn ON Bluetooth and Location on your mobile device

5. Scan the QR code on packaging, see sleeve or enclosed sticker in device case, download app either Apple or Android and complete the Login/Registration process (see pic 1 & 2 below)
6. Make 100% sure all **mandatory requirements** as listed above being numbers 1,2, 3 and 4 have been completed before moving forward!!!
7. Turn ignition on but just the ignition NOT the car itself and turn off everything such as A/C, Radio etc anything that drains the battery
8. Plug the PWR AI HHT Hand Held Tuner into your cars OBDII input (usually located underneath driver's side dashboard)
9. Open the MyFlasher App and pair your PWR AI HHT device
10. Stay in the vehicle during the entire process, do NOT step away!
11. Follow instructions exactly as outlined in the app only then click READ (see pic 3 below)
12. **NEVER** unplug the HHT device or switch off the vehicle ignition during the entire READ/WRITE operation
13. Once the READ process has been completed go to CHAT in the App and send a message requesting the PWR AI tuned file specifically programmed for your car
14. Unplug the PWR AI HHT first then turn off the ignition
15. Your PWR AI tuned file specifically programmed for your car will be send and you will receive a notification that the file is ready to be uploaded/written into your car's ECU
16. Once you are ready to upload/write the file onto your cars ECU please make 100% sure **mandatory requirements** as listed above being 1,2,3 and 4 have been completed!!
17. Plug your PWR AI HHT into the OBDII same as before (see 8)
18. Open the MyFlasher app follow the instructions exactly then click READ again. It requires to REDA the ECU again for safety, once this process has been done the app will

ask you if you are ready to WRITE, ONLY click on WRITE if all **mandatory requirements** as shown above under 1,2,3 and 4 have been completed!!!

19. Click on WRITE and let the PWR AI HHT do its magic!

20. The app will tell you if the writing process was successful


21. If yes, unplug the PWR AI HHT, turn off the ignition and remove the battery charger

22. Congratulations, you are now ready to enjoy your car with improved power and torque thanks to PWR AI


Pic 1



Pic 2

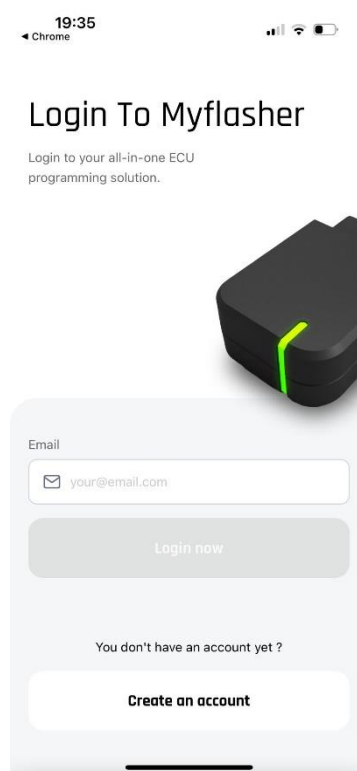

Pic 3

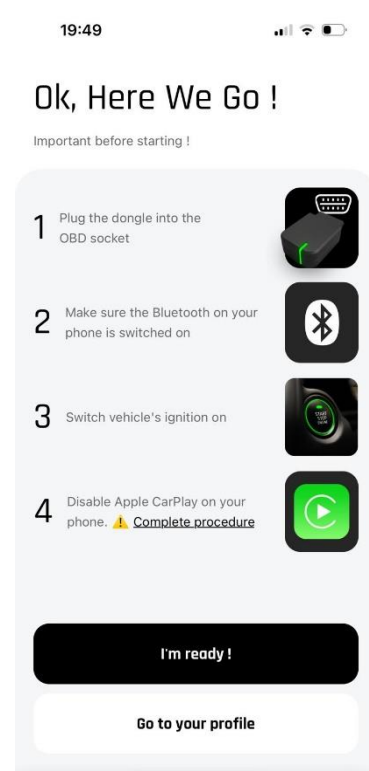

*How to disable

Apple CarPlay Procedure (iOS)

You can disable CarPlay from your iPhone settings by following these steps:

1. Open your iPhone's **Settings**.
2. Tap on **General**.
3. Select **CarPlay**.
4. Choose your **car** from the list.
5. Tap **Forget This Car** to remove the CarPlay connection from your vehicle.

Android Auto Procedure (Android)

You can disable Android Auto from your Android settings by following these steps:

1. Open the **Settings** menu on your Android smartphone.
2. Go to **Apps**.
3. Tap on **Android Auto**.
4. Select **Disable** at the bottom of the screen.
5. Confirm the action by tapping **Disable App**.